


**hsc**  
**ELITE**  
**TYPHOON**

**USER MANUAL**

CONTROLLED DOCUMENT NO: 00235UIRS0123V1

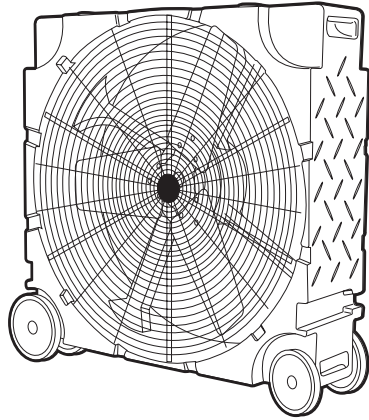

**IMPORTANT SAFETY INSTRUCTIONS**

Before using this product, please read this user manual, if you do not understand any of the instructions within, please do not use the product and consult your retailers or the manufacturer. Failure to follow these instructions may result in damage to the product, property and/or cause personal injury to the user or bystanders.

**SAFETY, OPERATION & MAINTENANCE INSTRUCTIONS  
FOR T250110, T250240, T400110 & T400240**

**KEEP THIS BOOKLET FOR FUTURE REFERENCE**



# | TYPHOON


## CONTENTS

Inspect your new product	Page 3
Product Key Component Identification	Page 3
General Safety Information	Page 4
Caution	Page 4
Installation and Set-up	Page 5
Control Panel & Wiring Diagram	Page 5
Maintenance, testing and troubleshooting	Page 6
Storage & Transport	Page 6
Specification Data Table	Page 7
Recycling	Page 8

## INSPECT YOUR NEW PRODUCT

Thank you for purchasing the Elite Typhoon Air Fans manufactured to the highest standards drawing upon over 20 years' experience supplying the UK hire and construction industry, this product will, if used in accordance with these operating instructions, labels affixed to the product and properly maintained, provide you with many years of reliable service.

## PRODUCT KEY COMPONENT IDENTIFICATION

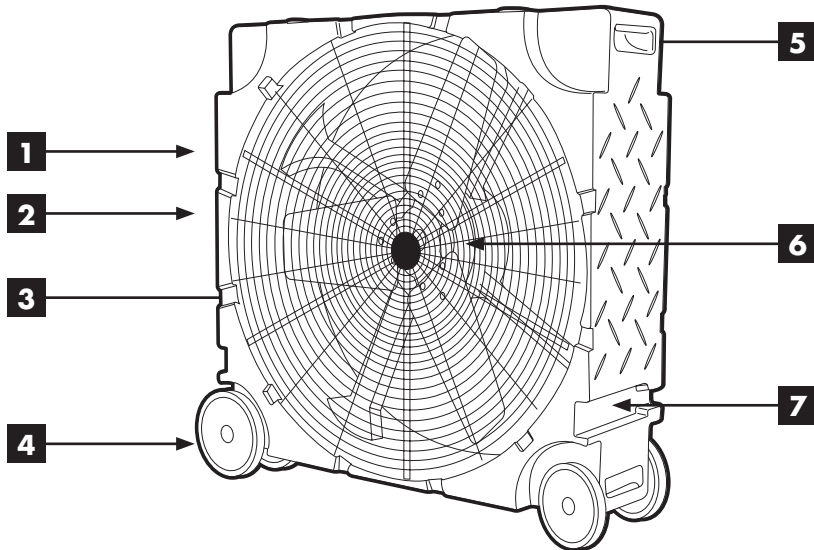

- |                                  |                                 |
|----------------------------------|---------------------------------|
| 1. Control Panel                 | 5. Integral carry handle        |
| 2. Main Cable & Cable Management | 6. Motor and fan blade assembly |
| 3. Safety Grill                  | 7. Interlocking straps          |
| 4. Transportation Wheels         |                                 |

## GENERAL SAFETY INFORMATION

**DO NOT** position the cooler up against the wall and position near any other structure that may restrict the air flow around the unit. Ensure a 1-meter gap is observed around the unit when in use.

Always ensure there is sufficient air flow around the front and back

When not in use always remove the unit from the power supply.

When removing the plug from the socket always do so by holding and pulling the main body of the plug and **NOT** the cable.

**DO NOT** modify this equipment to do tasks other than those intended, this will invalidate your warranty, product approvals and pose a risk to the user, bystanders, and property.

**DO NOT** use in an enclosed environment. There must be sufficient air flow for the unit to function correctly and perform to its full capabilities.

Never leave the unit running unattended.

**DO NOT** use the equipment if there is any damage noted on the mains inlet cable. Ensure the mains cable does not present a trip hazard.

**DO NOT** run the main cable across walkways, paths or in front of doors / doorways. Once the cable has been routed into the desired position please secure. Also consider and avoid sharp edges, water and chemicals when positioning the cable.

Ensure the cable is fully unwound before use.

If the external mains cable is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid hazard.

In some applications it may be necessary to complete a risk assessment and method statement on the use of this product. Please note this is the responsibility of the user to consider all foreseen and unforeseen risks and mitigate where possible.

Reading, understanding and adhering to these user instructions is essential for safe use and sufficient product training.

## CAUTION

**DO NOT** use the equipment if there are any signs of damage that may present a hazard in use. If you are unsure seek advice from a qualified person, retailer, or the manufacturer.

It is recommended this unit is used with an RCD device.

Ensure your hands are dry when connecting, using, and disconnecting an electrical appliance.

Always make sure the plug fuse and any other circuit protection is of the correct rating, refer to the product's rating label. If you are unsure, please contact either the reseller or manufacturer for assistance.

**DO NOT** leave the unit plugged in and/or running unattended where young children or infirm people may be able to touch the unit.

Always ensure children and people with reduced mental capabilities are supervised at all times where the unit is used and in operation.

Only use on a flat level surface.

## INSTALLATION AND SET-UP

Assembly instruction and any other consideration for the safe set-up of the product.

- Remove packaging used to secure product in transit.
- Attach wheels to the bottom of the unit. Pass the axles through the pre moulded holes leaving sufficient axle exposed on either side to secure the wheels.
- Add a wheel on either side followed by a washer and finally secure using the nyloc nuts provided.
- The following tools will be required to complete the assembly requirements – 17mm Spanner
- Attach the unit to the correct power supply, please refer to the products rating label for confirmation. BEFORE turning the power on ensure the Fan Speed switch is positioned to 0 (off)
- Turn the equipment on by turning the “SPEED” switch dial to 1 to set the fan speed to the lowest setting. To increase the fan speed and therefore the airflow simply turn the speed select switch to 2 or 3.
- To turn off position the speed switch back to 0. It is recommended to switch off and disconnect from the mains supply if the unit is not going to be used for a prolonged period of time.


## CONTROL PANEL

- 0: Off no air flow
- 1: Low Speed setting
- 2: Medium Speed Setting
- 3: High Speed setting



**NOTE:** There is a dedicated earth point clearly identified on the control panel for Class I earth continuity testing.

## WIRING DIAGRAM

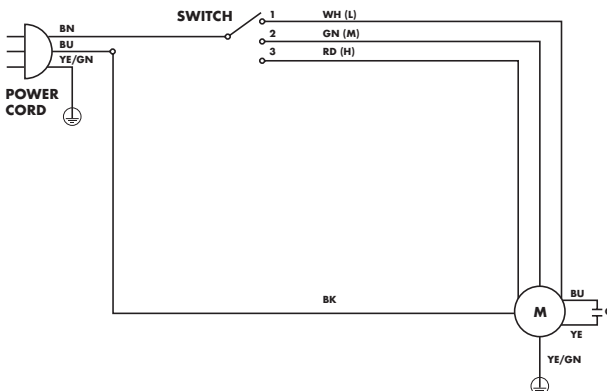

## MAINTENANCE, TESTING AND TROUBLESHOOTING

- To maximise the performance of the Elite Typhoon air fans it is suggested to ensure both the front and rear vents are clear of obstruction at all times
- Visually check the outside of the unit and the power cable, including the plug, before every use for any damage.
- The Elite Typhoon is a Class 1 appliance and therefore must be earth. The earth test point can be located on the front control panel where the earth symbol can be found.



### EARTH SYMBOL

FAULT	POSSIBLE CAUSE	SUGGESTED SOLUTION
No air flow	<ol style="list-style-type: none"><li>1. Unit is not plug in.</li><li>2. No power to equipment.</li><li>3. Air inlets blocked</li><li>4. Faulty fan motor</li></ol>	<ol style="list-style-type: none"><li>1. Make sure the unit is plugged in and switched on.</li><li>2. Check the mains power supply</li><li>3. Check for obstructions.</li><li>4. Replace fan motor</li></ol>

## STORAGE & TRANSPORT

Correct storage and recommended storage both short term and long term.

- Ensure the product is clean, use a dry using a lint-free cloth to remove any dust or debris from the unit
- Coil the mains cable onto the integral cable management and retain in position for protection.
- Where possible retain and use the original packaging for prolong periods of storage. If this is not possible use a clean cloth or dust sheets.

## SPECIFICATION DATA TABLE

Model	Elite T250110	Elite T250240
Power Supply (V)	110VAC 50Hz	230VAC 50Hz
Power – Motor (W)	157	185
Air Volume (m <sup>3</sup> /h)	9700	11700
Speeds	3	3
Fan Diameter	600mm - 24"	600mm - 24"
Max RPM	1040	1240
Size (mm) WxDxH	690 x 250 x 710	690 x 250 x 710
Noise (dBA)	≤81	≤81
Weight (kg)	15	15
Fan Type	Axial	Axial
Control Interface	Manual Controls	Manual Controls

Model	Elite T400110	Elite T400240
Power Supply (V)	110VAC 50Hz	230VAC 50Hz
Power – Motor (W)	260	294
Air Volume (m <sup>3</sup> /h)	15100	16200
Speeds	3	3
Fan Diameter	900mm - 36"	900mm - 36"
Max RPM	600	690
Size (mm) WxDxH	975 x 320 x1005	975 x 320 x 1005
Noise (dBA)	≤76	≤80
Weight (kg)	26.5	26.5
Fan Type	Axial	Axial
Control Interface	Manual Controls	Manual Controls



**ENVIRONMENTAL PROTECTION:** Please recycle any unwanted materials as opposed to disposing them as general waste. It is recommended the original is retained and used to store the product when not in use for prolonged periods of time. If this is not applicable ensure the materials are sorted and recycled in accordance with local regulations.

**SPECIFICATION CHANGE:** It is our policy to continually improve products to ensure these meet the rigours of the industry we serve. Therefore, as such we reserve the right to alter specifications, data and components parts without prior notice.

**WARRANTY:** All Elite products come with a 1-year warranty from date of purchase, proof of which will be required in the event of any claim.

**IMPORTANT:** No liability will be accepted for the incorrect use of this product.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal. Recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The Hire Supply Company (UK) Limited  
7-10 Eldon Road Trading Estate, Attenborough,  
Nottingham, NG9 6DZ, UK - Tel: 0115 946 1988

**HSCGROUPUK.CO.UK**

HSC Industrial and Commercial Equipment (EU) Ltd. 1st Floor, Penrose 1, Penrose Dock, Cork, T23 KW81, Ireland. Registered No: 689232