




SAFETY




USER AND MAINTENANCE BOOK	en
LIBRETTO USO E MANUTENZIONE	it
BEDIENUNGS- UND WARTUNGSANLEITUNG	de
MANUAL DE INSTRUCCIONES PARA EL USO Y MANTENIMIENTO	es
MANUEL D'UTILISATION ET DE MAINTENANCE	fr
HANDLEIDING VOOR GEBRUIK EN ONDERHOUD	nl
MANUAL DE USO E MANUTENÇÃO	pt
VEJLEDNING OM BRUG OG VEDLIGEHOLDELSE	da
KÄYTTÖ- JA HUOLTO-OHJE	fi
HEFT FOR BRUK OG VEDLIKEHOLD	no
ANVÄNDAR- OCH UNDERHÅLLSHANDBOK	sv
INSTRUKCJA OBSŁUGI I KONSERWACJI	pl
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ И ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ	ru
PŘÍRUČKA PRO POUŽITÍ A ÚDRŽBU	cs
HASZNÁLATI ÉS KARBANTARTÁSI KÉZIKÖNYV	hu
PRIROČNIK Z NAVODILI ZA UPORABO IN VZDRŽEVANJE	sl
KULLANIM VE BAKIM KİTAPÇIĞI	tr
KNJIŽICA O UPORABI I ODRŽAVANJU	hr
NAUDOJIMO IR PRIEŽIŪROS KNYGELĖ	lt
LIETOŠANAS UN TEHNISKĀS APKOPES GRĀMATIŅA	lv
KASUTUS- JA HOOLDUSJUHEND	et
LIVRET DE UTILIZARE ȘI ÎNTREȚINERE	ro
PŘÍRUČKA PRE POUŽITIE A ÚDRŽBU	sk
НАРЪЧНИК ЗА ИЗПОЛЗВАНЕ И ПОДДРЪЖКА	bg
ІНСТРУКЦІЯ КОРИСТУВАЧА ТА ОБСЛУГОВУВАНЯ ОБЛАДНАННЯ	uk
ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ	el
使用和维护手册	zh


FIGURES - FIGURE - ABBILDUNGEN - FIGURAS - FIGURES - FIGUREN
- FIGURAS - FIGURER - KUVAT - FIGURER - FIGURER - ILUSTRACJE
- ИЛЛЮСТРАЦИИ - OBRÁZKY - ÁBRÁK - SLIKE - ŞEKİLLER - SLIKE -
ILIISTRACIJOS - ATTÉLI - JOONISED - IMAGINI - OBRÁZKY - СХЕМИ - ДАНІ
- EIKONEΣ - 図示

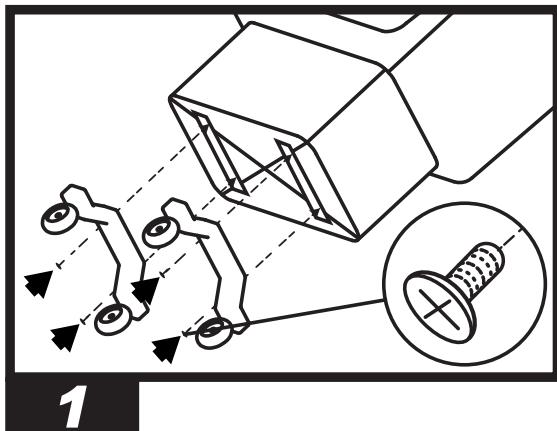


1

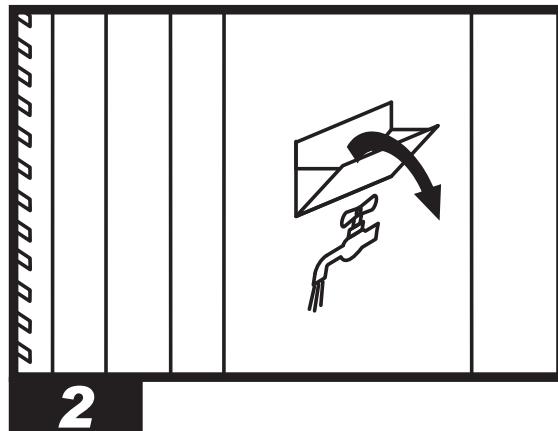


2

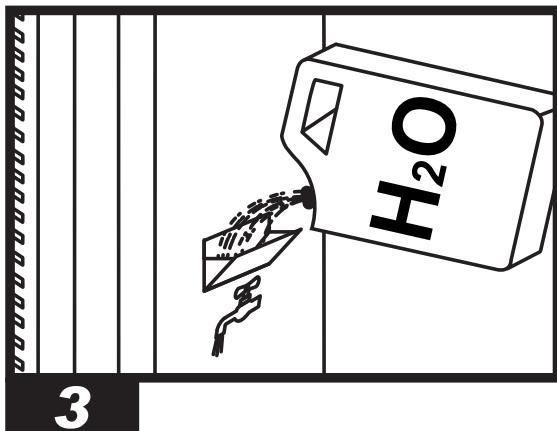


3

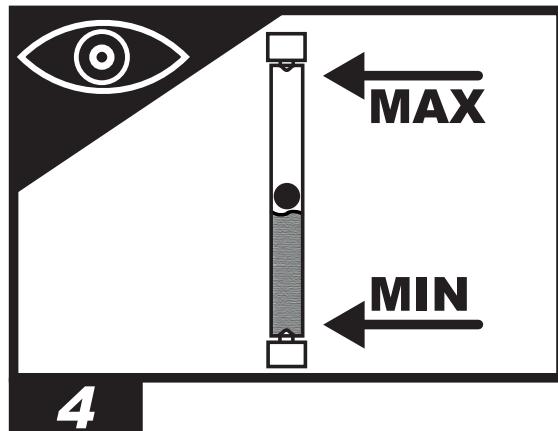


4

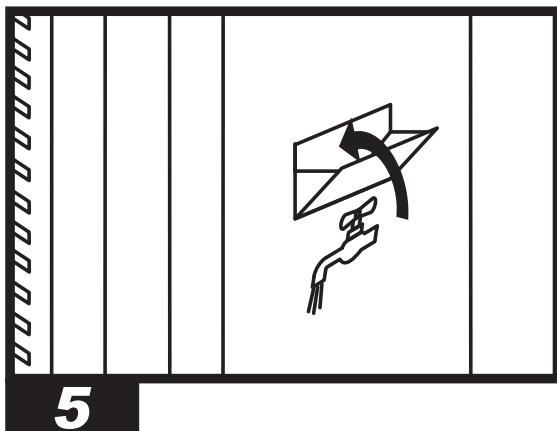


5

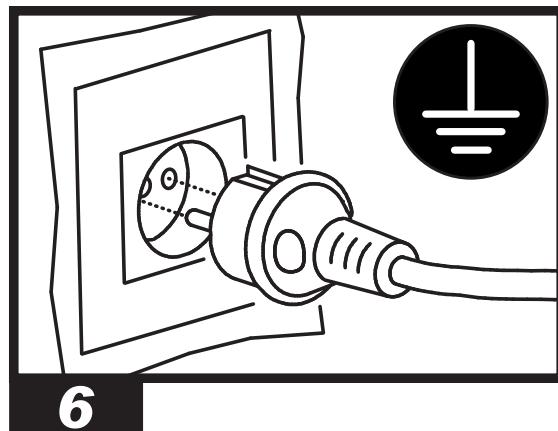

6

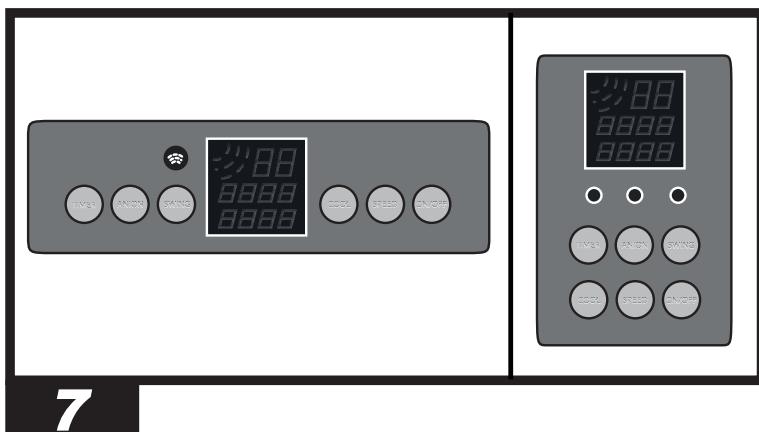


7

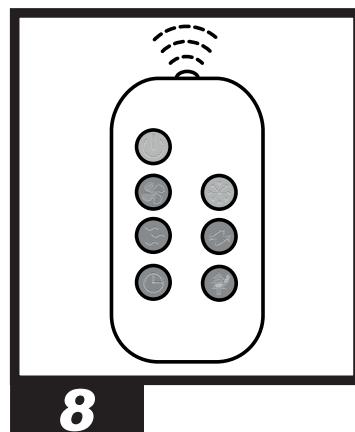


8


**FIGURES - FIGURE - ABBILDUNGEN - FIGURAS - FIGURES - FIGUREN
- FIGURAS - FIGURER - KUVAT - FIGURER - FIGURER - ILUSTRACJE
- ИЛЛЮСТРАЦИИ - OBRÁZKY - ÁBRÁK - SLIKE - ŞEKİLLER - SLIKE -
ILUSTRACIJOS - ATTÉLI - JOONISED - IMAGINI - OBRÁZKY - СХЕМИ - ДАНИ
- EIKONEΣ - 图示**

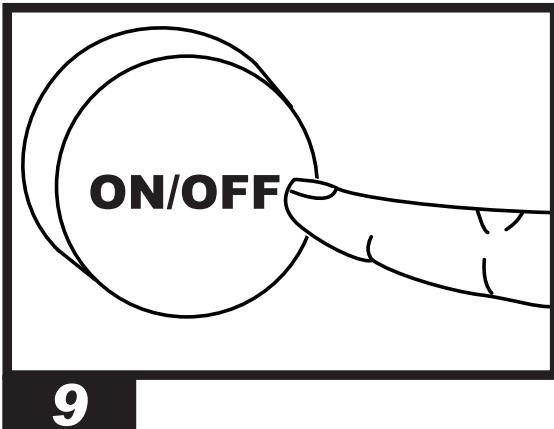


9

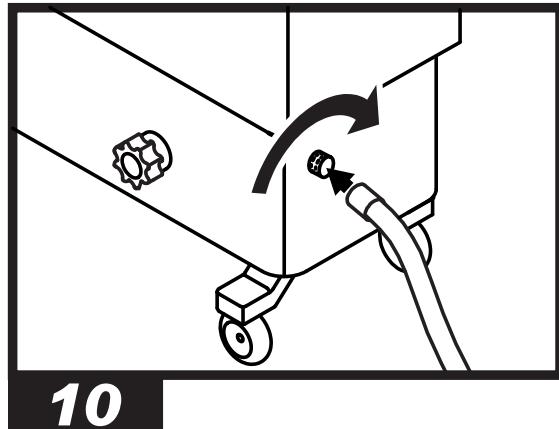


10

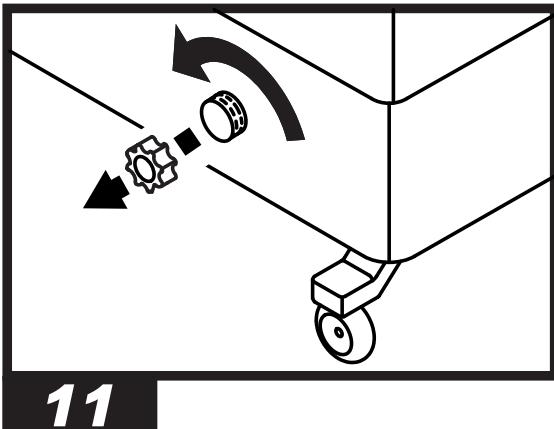


11

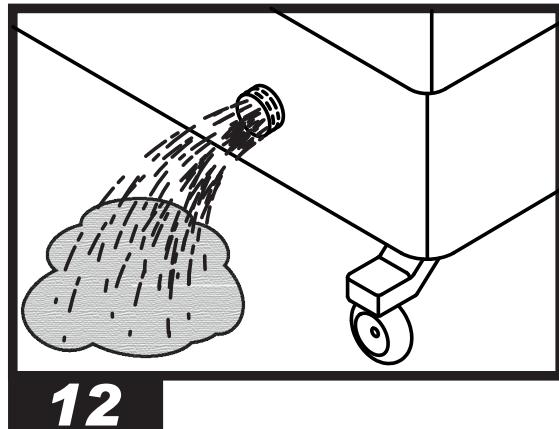


12

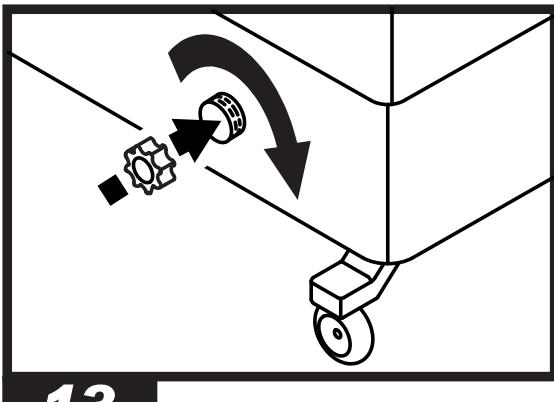


13

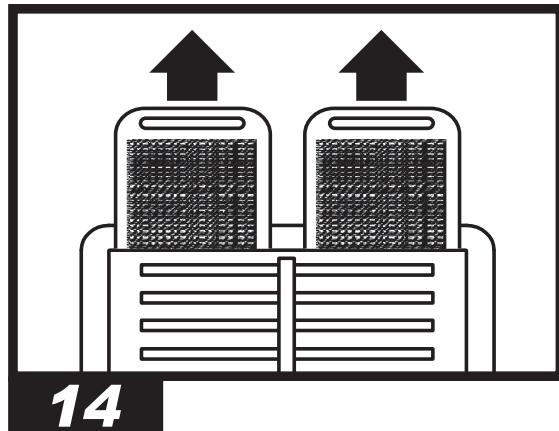

14

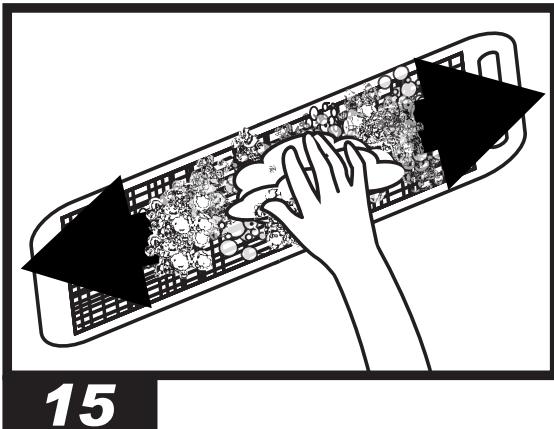

15

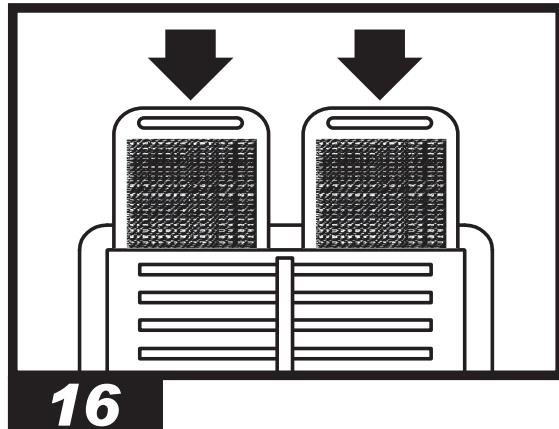

16

►►1. INFORMATION REGARDING SAFETY

IMPORTANT: READ AND UNDERSTAND THIS OPERATIONAL MANUAL BEFORE ASSEMBLING, COMMISSIONING OR PERFORMING MAINTENANCE ON THIS APPLIANCE. INCORRECT USE OF THE APPLIANCE CAN CAUSE SERIOUS INJURY. KEEP THIS MANUAL FOR FURTHER REFERENCE.

IMPORTANT: This appliance is not suitable for use by persons (including children) with reduced physical, sensory and mental capacities or with lack of experience or knowledge unless supervised by a person responsible for their safety. Children must be supervised to make sure they do not play with the appliance.

- 1.1. Fill the appliance tank only with clean water.
- 1.2. Switch off and disconnect the appliance from the mains before filling it.
- 1.3. Do not move the appliance, once the tank has been filled.
- 1.4. When using the appliance, comply with all local regulations and Standard in force.
- 1.5. Keep the appliance dry, in order to avoid electric shocks. Hands must always be dry.
- 1.6. Use only in ventilated and dry areas.
- 1.7. For indoor use only.
- 1.8. Power the appliance only with voltage and frequency as specified on the data plate.
- 1.9. Only use extensions with three wires appropriately connected to earth.
- 1.10. Do not cover the appliance with paper, cardboard, plastic, metal sheets or any other inflammable material during use, in order to prevent any risk.
- 1.11. The appliance must be used on a stable and levelled surface, in order to prevent any risk.
- 1.12. When it is not used, disconnect the appliance from the power plug.

- 1.13. Do not block the air vent (rear side) or the air outlet (front side) of the appliance.
- 1.14. The minimum safety distance recommended between the appliance and walls or other items is 0,5 m.
- 1.15. When the appliance is connected to the mains or running, it must never be moved, handled, topped-up or subject to any maintenance operation.
- 1.16. The appliance (power cable included) must be kept at a suitable safety distance from heat sources.
- 1.17. In any case, the appliance must be opened and/or repaired by authorised after-sales centre.
- 1.18. If the power cable is damaged, it must be replaced by the technical after-sales centre, in order to prevent any risk.
- 1.19. Rinse the case with clean water and clean it before using, after the period during which the bio cooler was not in use.
- 1.20. The flashing of the red diode on the control panel means that the water level in the vessel is low.
- 1.21. In the case of improper operation of the product at the start, disconnect it from the power supply immediately and contact service point.
- 1.22. Protect the power supply cord from damage as a result of movement of the vehicles or pedestrians. The connection of improper electrical voltage or improper installation, will cause the electrical shock hazard.
- 1.23. Conditions of use:
 - A) Air temperature: 18°C to 45°C; Water temperature: <45°C.
 - B) Voltage in the power supply source may not exceed the required voltage by (+/-) 5%.
 - C) The air supply must be free of dust, pollutants, or additional cleaning should be used.

►►2. UNPACKING

- 2.1. Remove all packaging materials used to wrap and deliver the appliance and dispose of them in compliance with the Standards in force.
- 2.2. Extract all items from the packaging.
- 2.3. Verify if damage undergone during transport. If the appliance appears damaged, inform the dealer, where the purchase was made, immediately.

►►3. ASSEMBLY

The device is equipped with wheels to facilitate handling. Depending on the model, wheels can be found already installed or not. Components equipped with relative nuts and bolts are found inside the packaging (Fig. 1).

►►4. OPERATION

WARNING: Thoroughly read the "INFORMATION REGARDING SAFETY", before switching the appliance on.

WARNING: Only use clean water to prevent failures or other anomalies.

WARNING: Verify if your electronic system is earthed correctly. Connection to the mains must be made in compliance with the National Standards in force. Power the appliance only with voltage and frequency as specified on the data plate.

NOTE: These models can be connected to the water mains, by connecting the pipe to the fitting (Fig. 10).

►►4.1. SWITCHING ON:

- 4.1.1. Open the tank door (Fig. 2).
- 4.1.2. Fill the tank with water (Fig. 3); water level must be within MIN and MAX level of the graduated scale, placed at the side of the appliance (Fig. 4), in order to prevent risks.
- 4.1.3. Close the tank door (Fig. 5).
- 4.1.4. Connect the power plug to the mains (Fig. 6).
- 4.1.5. Press the ON/OFF button to switch on the appliance (Fig. 9).

►►4.2. CONTROL PANEL, USE AND FUNCTIONS FOR MODEL BC

60 (Fig. 7-8):

- ON/OFF: It allows switching ON or OFF the appliance.
- SPEED: Allows increasing or decreasing the appliance ventilation speed. Three speeds can be selected - LOW, MID and HIGH.
- COOL: It enables or disables the cooling mode.
- SWING: It enables or disables the automatic vertical oscillation of the flaps to direct the air flow.
- ANION: It enables or disables the ionisation mode, i.e. release of negative ions into the environment, in order to make air healthier.
- TIMER: It enables or disables the timer of the appliance automatic switch-OFF. Intervals can be of half-hour up to 12 hours.

►►4.3. CONTROL PANEL, USE AND FUNCTIONS FOR BC 180 (Fig. 7-8):

- ON/OFF: It allows switching ON or OFF the appliance.
- COOL: It enables or disables the cooling mode. Pay attention to the fact that the fan is switched on one minute after the initiation of wetting of the cooling panel with water.
- BLAST: Pressing the COOL button again switches off the water vaporization function, and only the fan is in the operating mode.
- SPEED: Allows increasing or decreasing the appliance ventilation speed. Three speeds can be selected - LOW, MID and HIGH.
- SWING: It enables or disables the automatic vertical oscillation of the flaps to direct the air flow.
- TIMER DELAYED START: Enables the commencement of the operation of the device with a delay, after several hours. When the green light -POWER- is switched on only, press the TIMER until the required number of hours of delay (1-24) appears.

► **TIMER AUTOMATIC STOP:** When the device is in use, press the button and set the number of hours (1-24), after the expiry of which, the device will stop operating.

► **WATER SUPPLY:** Use clean and fresh water only. Pour water through an inlet located on the right side of the device (maximum 60 l). Optionally, in order to fill the vessel, it is possible to connect the hose with water to the inlet located on the left side of the device. If high pressure is present in the water source, use a reducing valve.

►► **4.4. SWITCHING OFF:**

► **4.4.1.** Press the ON/OFF button to switch off the appliance (Fig. 9).

► **4.4.2.** Empty the tank using the drain cap (Fig. 11-12-13).

►► **5. CLEANING AND MAINTENANCE**

WARNING: BEFORE PERFORMING ANY MAINTENANCE OR REPAIR, DISCONNECT THE POWER CABLE FROM THE MAINS.

DEPENDING ON THE ENVIRONMENT WHERE THE APPLIANCE IS USED, DUST, DIRT OR WATER QUALITY CAN AFFECT THE PERFORMANCE OF THE UNIT. THEREFORE, CLEANING THE FOLLOWING COMPONENTS CAN BE NECESSARY:

►► **5.1. TANK:**

We recommend changing the water frequently.

► **5.1.1.** Switch off the appliance and disconnect the plug from the mains (Fig. 9-6).

► **5.1.2.** Remove the drain plug and empty the vessel, then wash it, using a soft cloth. Wash away the dirt from the water sensor, water pump and float valve. Rinse everything.

► **5.1.3.** In order to clean the housing, use delicate soap and a soft cloth. Do not use any caustic detergents, which may damage the air conditioner housing.

► **5.1.4.** In order to prevent the accumulation of algae and other biological organisms in the vessel, add chlorine or bromine tablets or other tablets recommended by the manufacturer regularly, intended for the vessels of evaporation air conditioners.

►► **5.2. FILTERS FOR MODEL BC 60:** We recommend cleaning filters frequently.

WARNING: Dirty filters can affect the performance of the appliance.

► **5.2.1.** Switch off the appliance and disconnect the plug from the mains (Fig. 9-6).

► **5.2.2.** Remove the filters upwards (Fig. 14).

► **5.2.3.** Clean the filters using a mild detergent and a clean cloth (Fig. 15). Ensure the filter is fully dry.

► **5.2.4.** Place the filter back into its housing (Fig. 16).

►►6. TROUBLESHOOTING

FUNCTIONING ANOMALIES	CAUSES	SOLUTIONS
The display doesn't work	1. No power supply 2. Defective equipment	1a. Check whether the device is connected to power supply 1b. Contact service point 2. Contact service point
No air flow or too low	1. Obstruction of the air intake on the back 2. Defective equipment	1a. Keep the back side far from walls that can block air inlet 1b. Remove objects from inlet air section 1c. Contact service point 2. Contact service point
The device does not respond to commands	1. Defective equipment	1. Contact service point
The device leak water	1. The drain cap is loose 2. The drain is dirty and the cap doesn't fit 3. The tank leak 4. The panel drip	1. Close the drain cap 2. Clean the drain and close the cap 3. Contact service point 4. Contact service point



CE CONFORMITY CERTIFICATE - DICHIARAZIONE DI CONFORMITÀ CE - EG-KONFORMITÄTSERKLÄRUNG - DECLARACIÓN DE CONFORMIDAD CE - DECLARATION DE CONFORMITE CE - EG-CONFORMITEITVERKLARING - DECLARAÇÃO DE CONFORMIDADE CE - EU-OVERENSSTEMMELSESERKLÄRING - EY-VAATIMUSTENMUKAISUUSVA-KUUTUS - CE-SAMSVARSERKLÄRING - EG-FÖRSÄKRA OM ÖVERENSSTÄMMELSE - DEKLARACJA ZGODNOŚCI WE - ДЕКЛАРАЦИЯ О СООТВЕТСТВИИ CE - PROHLÁŠENÍ O SHODĚ CE - EK MEGFELELŐSÉGI NYILATKOZAT - IZJAVA O SKLADNOSTI IN OZNAKA CE - CE UYGUNLUK BEYANI - IZJAVA CE O SUKLADNOSTI - ES ATITIKTIES DEKLARACIJA - EK ATBILSTĪBAS - DEKLARĀCIJA - EÜ VASTAVUSDEKLARATSIOON - DECLARAȚIE DE CONFORMITATE CE - PREHLÁSENIE O ZHODE CE - ДЕКЛАРАЦИЯ ЗА СЪВМЕСТИМОСТ CE - ДЕКЛАРАЦІЯ ВІДПОВІДНОСТІ CE - IZJAVA CE O PRIKLADNOSTI ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ CE - CE 符合性声明

MCS ITALY S.p.A. Via Tione, 12 - 37010 - Pastrengo (VR) ITALY

Product: - Prodotto: - Produkt: - Producto: - Produit: - Produto: - Produkt: - Tuote: - Produkt: - Produkt: - Produkt: - Изделие: - Výrobek: - Termék: - Izdelek: - Ürün: - Proizvod: - Gaminys: - Ierīce: - Toode: - Produsul: - Výrobok: - Продукт: - Виріб: - Proizvod: - Προϊόν: - 产品:

BC 60 - BC 180

We declare that it is compliant with: - Si dichiara che è conforme a: - Es wird als konform mit den folgenden Normen erklärt: - Se declara que está en conformidad con: - Nous déclarons sa conformité à: - Hierbij wordt verklaard dat het product conform is met: - Declara-se que está em conformidade com: - Vi erklærer at produktet er i overensstemmelse med: - Vakuutetaan olevan yhdenmukainen: - Man erklærer at apparatet er i overensstemmelse med: - Härmad intygas det att produkten är förenlig med följande: - Oświadczenie się, że jest zgodny z: - Заявляем о соответствии требованиям: - Prohlašuje se, že je v souladu s: - Kijelentjük, hogy a termék megfelel az alábbiaknak: - Izpolnjuje zahteve: - Aşağıdaki standartlara uygun olduğunu beyan ederiz: - Izjavljuje se da je u skladu s: - Pareiskiame, kad atitinka: - Tieki deklarēts, ka atbilst: - Käesolevaga deklareeritakse, et toode vastab: - Declarăm că este conform următoarelor: - Prehlasuje sa, že je v súlade s: - Декларира се че отговаря на: - Відповідає вимогам: - Izjavljuje se da je u skladu s: - Δηλώνουμε ότι είναι σύμφωνο με: - 兹证明符合:

2006/95/EC, 2004/108/EC, RoSH 2002/95/EC

**EN 60335-2-98: 2003 + A1: 2005 + A2: 2008
EN 60335-1: 2002 + A11: 2004 + A1: 2004 + A12: 2006 +
A2: 2006 + A13: 2008 + A14: 2010 + A15: 2011
EN 62233: 2008**

Pastrengo, 16/02/2015

Stefano Verani (CEO MCS Group)

MCS Italy S.p.A.
Via Tione 12, -37010-
Pastrengo (VR), Italy
info@mcsitaly.it

MCS Central Europe Sp. z o.o.
ul. Magazynowa 5A,
62-023 Gądkie, Poland
office@mcs-ce.pl

MCS Russia LLC
ul. Transportnaya - 22 ownership 2,
142802, STUPINO, Moscow region, Russia
info@mcsrussia.ru

MCS China LTD
Unit A1, No. 1515, Jinshao Rd.,
Baoshan Industrial Zone,
Shanghai, 200949, China
office@mcs-china.cn

MCS Italy S.p.A.
Виа Тионе, 12, 37010
Пастренго (Верона), Италия
info@mcsitaly.it

MCS Central Europe Sp. z o.o.
ул. Магазинова, 5А,
62-023 Гадки, Польша
office@mcs-ce.pl

ООО «ЭмСиЭс Россия»
Ул. Транспортная, владение 22/2,
142802, г.Ступино, Московская обл., РФ
info@mcsrussia.ru

MCS China LTD
строение А1, № 1515, ул. Джиньшань,
промышленная зона Баошань,
Шанхай, 200949, Китай
office@mcs-china.cn