




Machinery | Spares | Consumables
(Specialist suppliers to Tool Hire & Garden Machinery Dealers)


GP26B Parts List



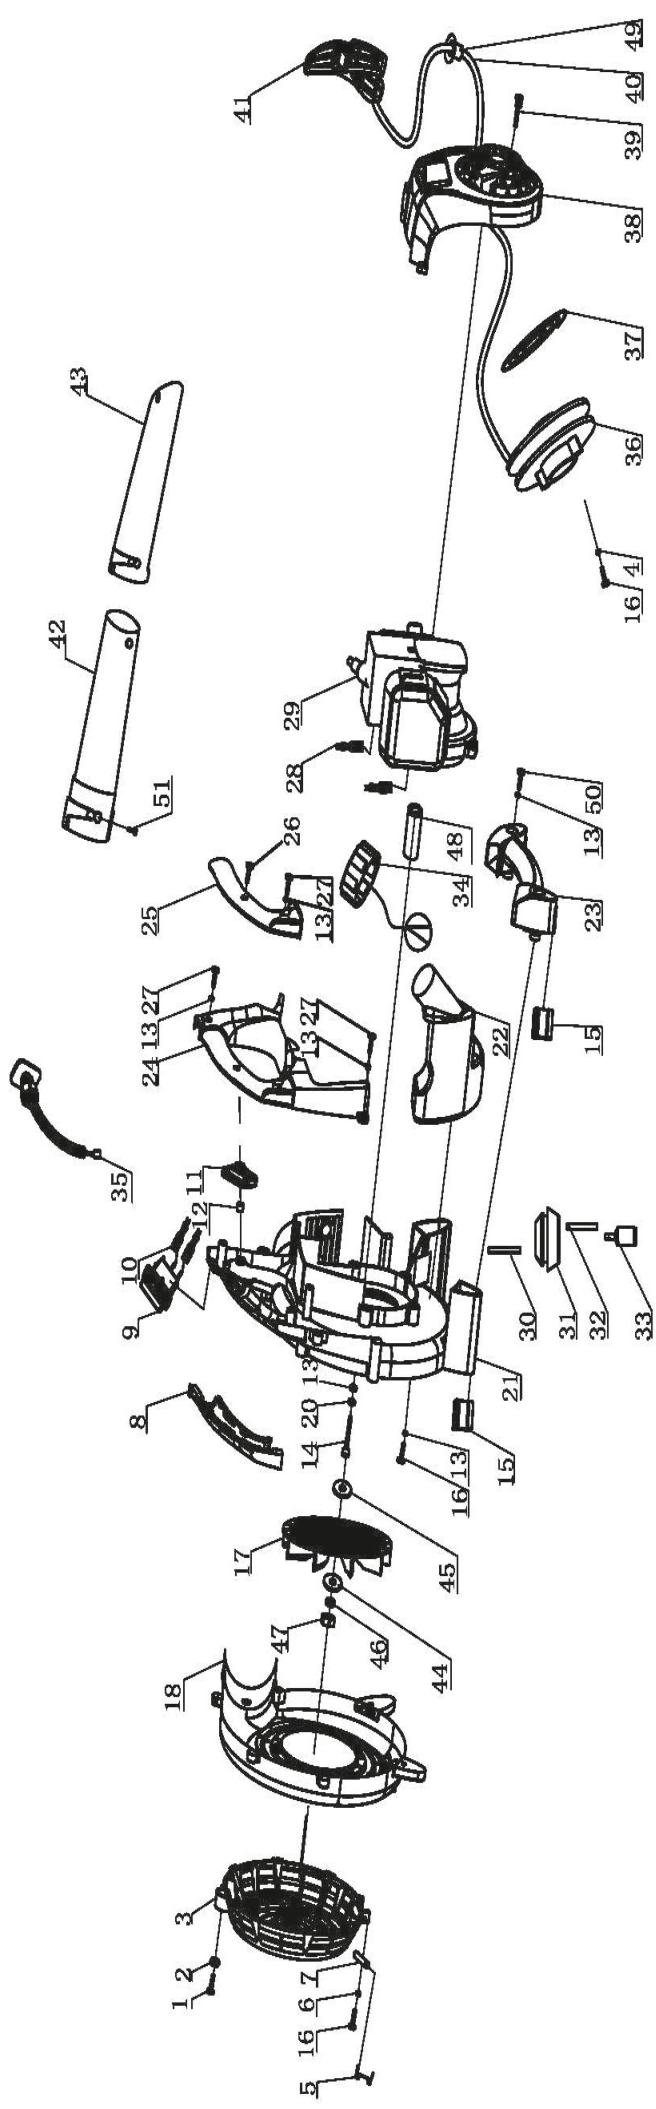

Item No.	Part No.	Description
1	GP03010060059	Screw (M4x14)
2	GP03040010007	Washer (Ø 4mm)
3	GP70030030303	Fan Net Cover
4	GP03040050022	Washer
5	GP02020110048	Wrest Spring
6	GP03040050017	Washer 6
7	GP02020160312	Wrest Spring Shaft
8	GP02080020046	Left Handle Rubber Cover
9	GP02050050111	Stop Switch Complete
10	GP02050050171	Stop Wire
11	GP70030070109	Throttle Lever Handle
12	GP02020160398	Throttle Lever Shaft
13	GP03040020020	Washer 5
14	GP03010010045	Screw (M5x30)
15	GP02020160117	Pedestal
16	GP03010060078	Screw (M5x10)
17	GP70030090006	Impeller
18	GP70030010071	Rear Cochlea Cass
19	GP03010040048	Screw QC/T713
20	GP03050010015	Washer 5
21	GP70030010055	Front Cochlea Case
22	GP70050030063	Fuel Tank
23	GP70030160093	Lower Handle
24	GP70030160048	Upper Handle
25	GP02080020046	Right Handle Rubber Cover
26	GP03010040017	Screw ST4.2x10
27	GP03010040057	Screw NST5*20

Item No.	Part No.	Description
28	GP02050050171	Short Stop Wire
29	GP51010040002	Petrol Engine
30	GP01040010003	Return Fuel Pipe (70mm Length)
31	GP02080030025	Fuel Pipe Rubber Bung
32	GP01040010014	Fuel Inlet Pipe (220mm Length)
33	GP02050120002	Filter Cleaner
34	GP02110020026	Fuel Cap Assembly
35	GP02050040087	Throttle Wire Complete
36	GP02060020003	Starter Pope Reel
37	GP02060020009	Cole Spring
38	GP70080100004	EBV260BN
39	GP03020020041	Screw (M5×30)
40	GP01050010009	Starter Pope
41	GP70030140013	Starter Handle
42	GP70050010066	Blow The Breeze Tube A
43	GP70050010067	Blow The Breeze Tube B
44	GP03040010014	Washer (Ø 8)
45	GP03040050005	Washer 23*8*1
46	GP03050010007	Washer 8
47	GP03030020002	Nut (M8×1)
48	GP02040030020	Bushing
49	GP02050070048	Guide, Rope
50	GP03010060076	Screw (M5×30)
51	GP03020020018	Screw (M5×10)

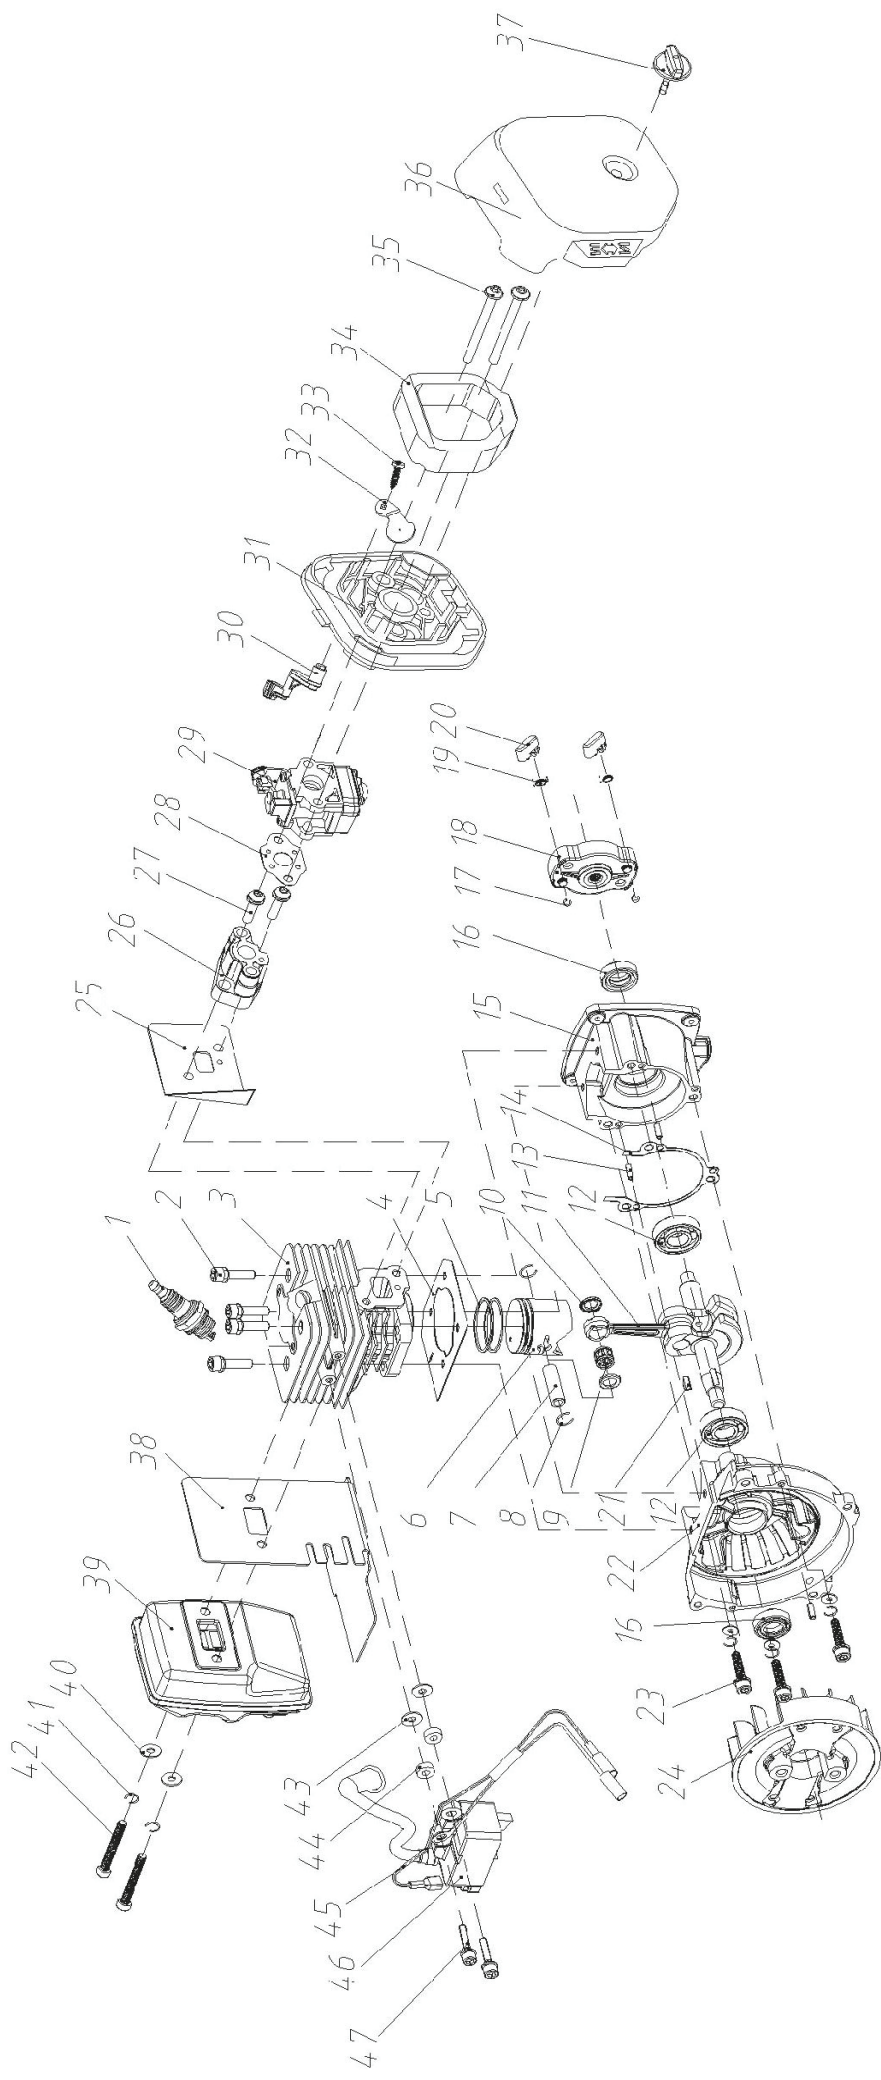

Item No.	Part No.	Description
1	BPMR7A	Spark Plug BPMR7A
2	GP03010010061	Bolt (M5x20)
3	GP70070130011	Cylinder
4	GP02070010020	Cylinder Gasket
5	GP02020020003	Piston Ring
6	GP02010020006	Piston
7	GP02020010004	Piston Pin (8x28)
8	GP02020030017	Snap Ring
9	GP03090020018	Needle Bearing
10	GP02020150007	Thrust Washer
11	GP02020120026	Crank Shaft Assembly
12	GP03090010028	Bearing (6001/P5)
13	GP03060010002	Pin (B3x10)
14	GP02070010110	Crankcase Gasket
15	GP03050010014	Rear Crankcase
16	GP03100010009	Oil Seal (12x22x7)
17	GP03120030003	Stop Ring
18	GP70070080010	Starter Pulley
19	GP02020110088	Starter Pawl Spring
20	GP70030140014	Starter Pawl
21	GP03070010001	Woodruff Key
22	GP70070050001	Front Crankcase
23	GP03010010045	Bolt (M5x30)

Item No.	Part No.	Description
24	GP02050030018	Rotor
25	GP02070010078	Insulator Gasket
26	GP02110030031	Insulator
27	GP03020020012	Bolt Assembly (M5x20)
28	GP02070010061	Carburettor Gasket
29	GP02050020045	Complete Carburettor
30	GP70030040038	Choke Handle
31	GP70080120007	Inside Cleaner Cover
32	GP70030040028	Choke
33	GP03010040008	Bolt (ST4×10)
34	GP02090010011	Air Filter Element
35	GP03020020030	Bolt Assembly (M5x60)
36	GP70030040078	Cleaner Cover
37	GP70030180012	Cover Knob
38	GP02070010141	Exhaust Gasket
39	GP02050010018	Exhaust Assembly
40	GP03040020019	Washer 5
41	GP03050010014	Washer 5
42	GP03010010049	Screw (M5x50)
43	GP03040010007	Washer 4
44	GP02070010048	Ignition Coil Spacer
45	GP02050050141	Stop Wire
46	GP02050030024	Complete Ignition Coil
47	GP03020020013	Screw (M4x20)